 
 


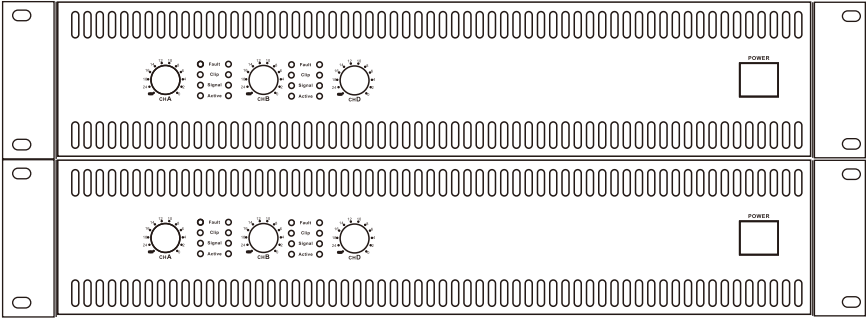

PROFESSIONAL AUDIO POWER AMPLIFIER



Front panel and rear panel functions:

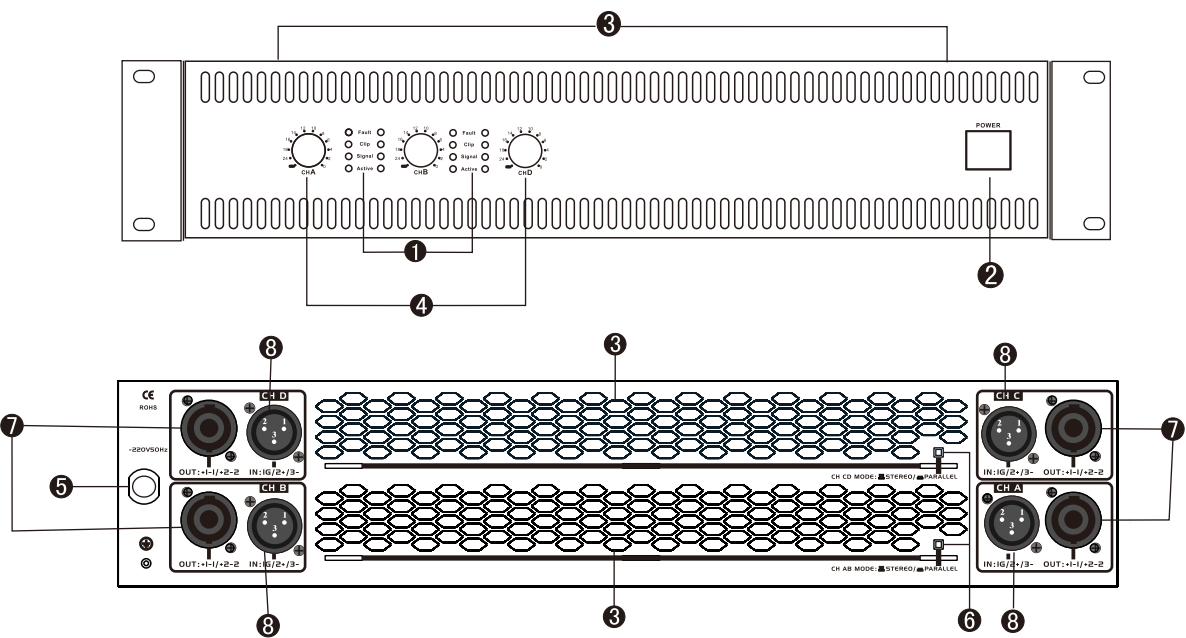

- ① Front panel west lane function display lights: protection/failure indicator light (Fault), limit indicator light (Clip), signal indicator light (Signal), operation indicator light (Active).
- ② power switch ③ ventilation hole
- ④ A,B, C, D channel volume control (three-channel amplifier is A, B, C channel volume control)
- ⑤ power line ⑥ Working mode selection switch
- ⑦ Speakon output connection socket ⑧ input socket

Installation of working mode:

The product has two functions: stereo and parallel connection, which can be selected through the STEREO and PARALLEL key switches on the rear panel. Channel A and channel B share a mode switch, and channel C and channel D share a mode switch.
(The three-channel amplifier does not have Cand D-channel mode switches)

1. Stereo working mode

Before connecting, turn off the amplifier and press the working mode switch to the STEREO position. Please pay attention to the positive and negative poles of the speaker when wiring. Be careful!

The signal is entered by the A-channel input socket, and the A-channel SPEAKON and the wiring post are output.
The signal is entered by the B-channel input socket, and the B-channel SPEAKON and the wiring post are output.
The signal is entered by the C-channel input socket, and the C-channel SPEAKON and the wiring post are output.
The signal is entered by the D-channel input socket, and the D-channel SPEAKON and the wiring post are output.
(Three-channel amplifier has no D-channel)

Notes:



Warning!

Installation:

- This device can only be plugged into the AC power outlet indicated in this user manual or the specifications shown on this adapter. Otherwise, it may cause fire or electric shock.
- Do not let the water enter the person's clothes straight or get damp. One hundred may cause a fire or electric shock.
- Do not put containers containing liquids or small metal objects on this device. Otherwise liquid or small metal items falling into the device may cause fire or electric shock.
- Do not press heavy objects (including this device) on the power cord. Otherwise, the power cord may be damaged, which may lead to fire or electric shock. Pay special attention not to press heavy objects on the power line covered by the carpet.

Operation:

- Do not scratch, dome, twist, stretch or heat the power cord. Incense may pre-injure the power cord, which will lead to Fire or electric shock.
- Don't use it to charge it directly. Incense may cause electric shock. If you think that the interior needs to be repaired, maintained or repaired, please contact the agent key dealer.
- Please do not modify this device. Incense may cause fire or electric shock.
- If there is an internal lightning strike, please turn off the power switch as soon as possible, and plug in the power cable from the power supply.
- If lightning may occur, do not touch the plug of the power cable when plugged in. Hundreds of cases may cause electric shock.

When an exception occurs during operation:

- If the power cord is pre-depre-cored (such as cut off or state line naked money), please get the replacement from the agent dealer. Use the injured electricity. Continued use of this device by the source wire may cause fire or electric shock.
- If the device falls from a height or the shell is damaged, please turn off the on tact the agent Do not continue to power immediately, pull out the power plug from the AC power outlet, and c use this killing precaution, which may cause a fire or electric shock.
- When any abnormality is found, such as smoke, odornoise or foreign matter or liquid entering the device, please turn off the power switch immediately. The well pulls the power cord plug out of the AC power outlet. Please ask the agent dealer to repair it on your behalf. If you continue to use it at this time, it may lead to fire or electric shock.



Attention!

Installation:

- Please avoid using this device in the following situations:
 - Second, be exposed to splashed oil foam and steam, such as near kitchen stoves, humidifiers and other places.
 - An unstable surfacesuch as a shaking surface or a surface.
 - Exposure to an overheated environment, such as in a closed car or a place exposed to direct sunlight.
 - Exposed to high humidity or where dust accumulates.
- Do not place the power cable near the heater. Otherwise, it may lead to melting and cause a fire.

- Please grasp the plug part when unplugging the power plugfrom the AC power outlet. Do not pull the cable straight. Otherwise,the power cord may be damagedwhich may lead to fire or electric shock.
- Do not touch the power plug with wet hands.Otherwise, it may lead to electric shock.
- There are ventilation holes on the front and back of this package to avoid the internal temperature rising too high. Do not block these vents.Blocking the vents may cause a fire.Pay special attention ,do not.

- First, put the device sideways or upside down.
 - Put this device in a poorly ventilated place,such as abookcase or closet,instead of installing it on the attached special bracketUp.
 - Cover the device with a tablecloth,or put it on the carpet and bed.
- Please keep enough space around this device to facilitate normal ventilation. The reserved space should be at least 10cm on both sides and at least 10cm above. if sufficient air flow is not maintainedthe internal temperature of the device will rise and may lead to a fire.
- To move the position of this device,please first unplug the power plug from the AC power outlet and pull out all the connecting cables.Otherwise, the cable may be damaged,which may lead to fire or electric shock.

Operation:

- When the speaker is connected to the amplifier output socketonly a dedicated cable for the speaker can be used.The use of other cables may cause fire.
- When connecting this device,please turn off all instruments,audio equipment and speakers firstPlease use the correct cable.Connect according to the regulations.
- Before turning on the power of this device,be sure to turn the volume control to the minimum. Otherwise, the sudden explosion of sound may damage your hearing.
- If you are tired and it is inconvenient to use this device for a long time,if you are going to have a long vacation,please take the power plug out of the AC power outlet. Incense may cause the fire to go out.

 Please put the amplifier accessories(such as feet,instruction manual pockets,etc.) in places that are not easy for children to get.

 This symbol means "Only applicable to safe use at an altitude of 2,000 meters and below.

 The symbol means "only applicable to non-tropical climate conditions.

introduce briefly

Thank you very much for choosing our company's professional audio power amplifier. For your safety,enlarge Yili in installation and operation. Please read the previous notes first.

Our company specializes in first-frequency power amplifiers.it has stable lines,reasonable heat dissipation layout and carefully selected elements. The device,lean manufacturing process, andlong-term aging test ensure that the power amplifier has excellent performance and reliability

Functional features:

- High-efficiency heat dissipation camp,roughly under the speed of the cooling fan, to ensure that the amplifier works at my low temperature.
- Large ring transformer to ensure sufficient power supply.
- Exquisite shape, cup-level installation hole.
- STERERO,PARALLEL
- Use Cannon input socket and Speakon output socket.
- Each channel has its own purpose Signal and Clip.
- When the protection circuit works,Fauul means that the light is not finished, and the sound output will stop automatically.
- Front panel level gain control.
- Perfect protection,including limit,on/offimpact protectionDC protecionoutput short circuit protection,overheating protection.

Technical parameters of multi-channel series products

Mode l	————	————	————	————	————	RH3680
Rated power (8)	CHA: 150W CHB: 150W CHC: 150W CHD: ----	CHA: 250W CHB: 250W CHC: 250W CHD: ----	CHA: 350W CHB: 350W CHC: 350W CHD: ----	CHA: 450W CHB: 450W CHC: 800W CHD: ----	CHA: 550W CHB: 550W CHC: 550W CHD: ----	CHA: 600W CHB: 600W CHC: 800W CHD: ----
Rated power (4)	CHA: 240W CHB: 240W CHC: 240W CHD: ----	CHA: 400W CHB: 400W CHC: 400W CHD: ----	CHA: 560W CHB: 560W CHC: 560W CHD: ----	CHA: 720W CHB: 720W CHC: 1280W CHD: ----	CHA: 880W CHB: 880W CHC: 880W CHD: ----	CHA: 960W CHB: 960W CHC: 1280W CHD: ----
Frequent response	20Hz-20kHz: +0.1/0.3dB (1W/8)					
Total harmonic distortion	<0.05%	<0.05%	<0.05%	<0.05%	<0.05%	<0.05%
Damping coefficient	>300:1	>300:1	>300:1	>350:1	>350:1	>350:1
signal-to-noise ratia	>103dB	>103dB	>103dB	>103dB	>103dB	>103dB
Voltage corversion slaughter	40Xstandrd	40Xstandrd	40Xstandrd	50Xstandrd	50Xstandrd	50Xstandrd
Input gain	0. 775V					
Input impedance	Balanced20Kohm/non balanced10Kohm					
Power supply voltage	AC~200-240V/50-60Hz					
External dimensions	2U(483mm*472mm*88mm)					

2. Parallel working method

Parallel mode can send the same signal to two channels without using external wiring.

 
Before connecting, turn off the amplifier, adjust the volume control potentiometer knob of A, B, C and D channels to the minimum (counterclockwise to the bottom), and press the key switch to the PARALLEL position, as shown in the figure below for wiring.

The first set of signals is input by the A channel separately, and A and B are output respectively.

The panel A and B knobs control their volume respectively.

The second set of signals is input separately by the C channel, C and D are output respectively, and the panel C and D knobs control their volume respectively.

Only A and B channels can choose the parallel mode of the three-channel amplifier, and the G channel needs to input the signal separately.

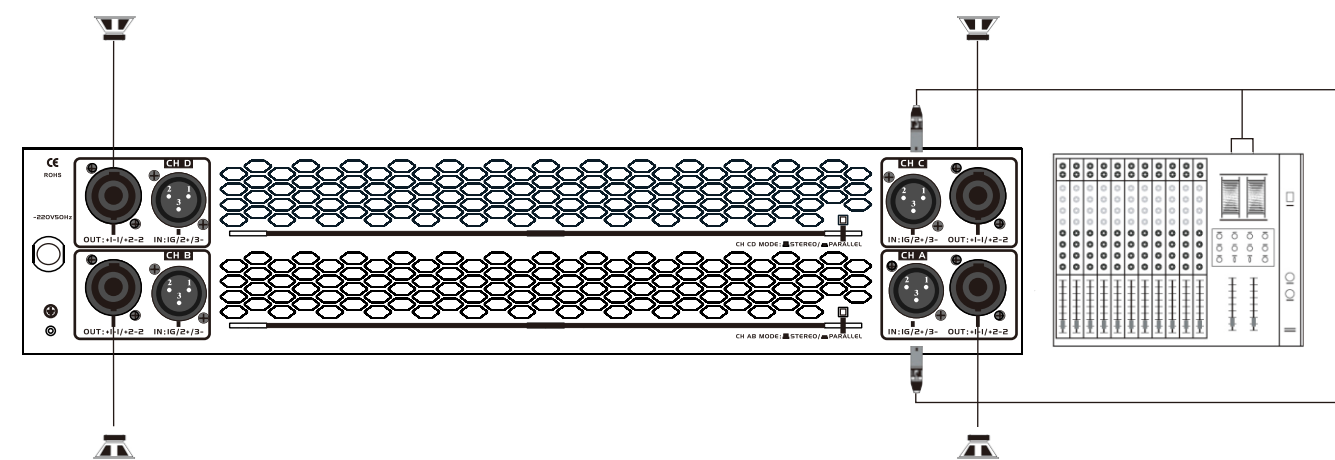

Operation steps:

1. select the working mode for input and output connection(please refer to the installation section).
2. The volume potentiometer must be set to the minimum before connecting the AC power supply. (Adjust it counterclockwise to the end)
- 3.After the power supply of the power amplifier,the running light area on the panel is always on.
4. When adjusting the volume potentiometer, the green signal light of the panel should shine with the adjustment size.
- 5.The red indicator light(Clip LED) on both sides is the limit indicator of the two channels.If the limit indicator lightflashes, it means that the output signal has been limited.When the amplifier is working normally,it is normal for the limit indicator light to shine intermittently.
6. If the limit indicator light shines continuously for too long,the volume control potentiometer should be appropriately reduced.